



Position	Part No.	Qty.	Name	Type	Description	Old part No.
1	65405211		SelfTape Screw	PT 4 x 16		
2	65406201		motor housing	EPR 350-23		
3	65405219		SelfTape Screw	PT 3,2 x 6		
4	65405505		Carbon Brush	EPR 40-23		
5	65405506		Brush Holder	EPR 40-23		
6	65406202		Stator	EPR 350-23		
8	65405224		Ball Bearing	608 ZZ		
14	65406203		Rotor	EPR 350-23		
15	65405226		Ball Bearing	6000 ZZ		
16	65406204		oil hose	EPR 350-23		
17	65405243		Oil Outlet	EPR 40-23		
18	65406205		oil pump assemb	EPR 350-23		
19	65406206		circlip	d6		
20	65406207		gasket	6,3x12x0,5		
21	65406208		Protection leve	EPR 350-23		
22	65406209		Handle	EPR 350-23		
23	65406210		Oil tank	EPR 350-23		
30	65405240		Oil Inlet Pipe	EPR 40-23		
31	65405203		Power Cord	EPR 40-23		
32	65405206		Cable Sheath	EPR 40-23		
33	65406211		Left housing	EPR 350-23		
34	65405204		Press Board	EPR 40-23		
35	65405205		SelfTape Screw	PT 4 x 12		
36	65405234		Switch	EPR 40-23		
37	65406212		Trigger	EPR 350-23		
38	65405207		LockOffButton	EPR 40-23		
39	65406213		Spring	d7,5x29		
40	65405233		Capacitor	EPR 40-23		
41	65405216		SelfTape Screw	PT 5 x 16		
42	65406214		Spacer	h4,5		
43	65406215		Pinion	EPR 350-23		
44	65405230		FlangeHead Nut	M8		
45	65406216		Oil hose tip	EPR 350-23		
46	65405232		O Sealing Ring	EPR 40-23		
47	65406217		Flat gasket	d4,2x16x1		
48	65406218		lock button	EPR 350-23		
49	65406219		lock but spring	65 Mn		
50	65406220		Cord clip	EPR 350-23		
51	65406221		Brake System	EPR 350-23		
55	65406222		connecting rod	EPR 350-23		
56	65406223		Brake plate	EPR 350-23		
57	65406224		Spring	d7x16		
58	65406225		push plate	EPR 350-23		

Position	Part No.	Qty.	Name	Type	Description	Old part No.
59	65406226		Nut	M8		
60	65406227		big gear	EPR 350-23		
61	65406228		Spacer	h7		
62	65406229		Brake Spring	EPR 350-23		
63	65406230		Output shaft	EPR 350-23		
64	65405226		Ball Bearing	6000 ZZ		
65	65406231		Gear cover	EPR 350-23		
66	65406232		Right housing	EPR 350-23		
67	65406233		Screw	ST3x12		
68	65406234		Oil seal	EPR 350-23		
69	65406235		Sprocket spring	EPR 350-23		
70	65405249		Sprocket	EPR 40-23		
71	65405250		EShape Circlip	14		
72	65406236		Tighten. screw	EPR 350-23		
73	65406237		Tightening knob	EPR 350-23		
74	65406238		Tknob cap	EPR 350-23		
75	65406239		Screw	ST4x20		
76	65406240		Guide plate	EPR 350-23		
77	65405252		Buffer Board	EPR 40-23		
81	65406241		Gasket	EPR 350-23		
82	65406242		Sprocket hood	EPR 350-23		
83	65406243		Positioning rin	EPR 350-23		
84	65406244		Knob with nut	EPR 350-23		
85	65405258		Soft Start	EPR 40-23		